



Do not exceed the rated load. Use as many poles as required. Make sure that all connections are securely tightened including factory fitted connections that may have worked loose during transit.

