



The supplies to the phase coupler must be connected via a 3 pole isolating switch. The phase coupler draws only 75mA per phase. It may be connected using 1mm<sup>2</sup> Cable .

