




Avoid direct sunlight entering the sensor. Do not site within 1m of forced heating/cooling ventilation. Note that the lower the sensor is mounted the smaller the detection range will be.


WARNING!

The unit must be fitted at least 50mm from the end of the tube. The Detectors cable must not touch any part of the lamp.


Standard PRM wiring Layout (Tube mounted):

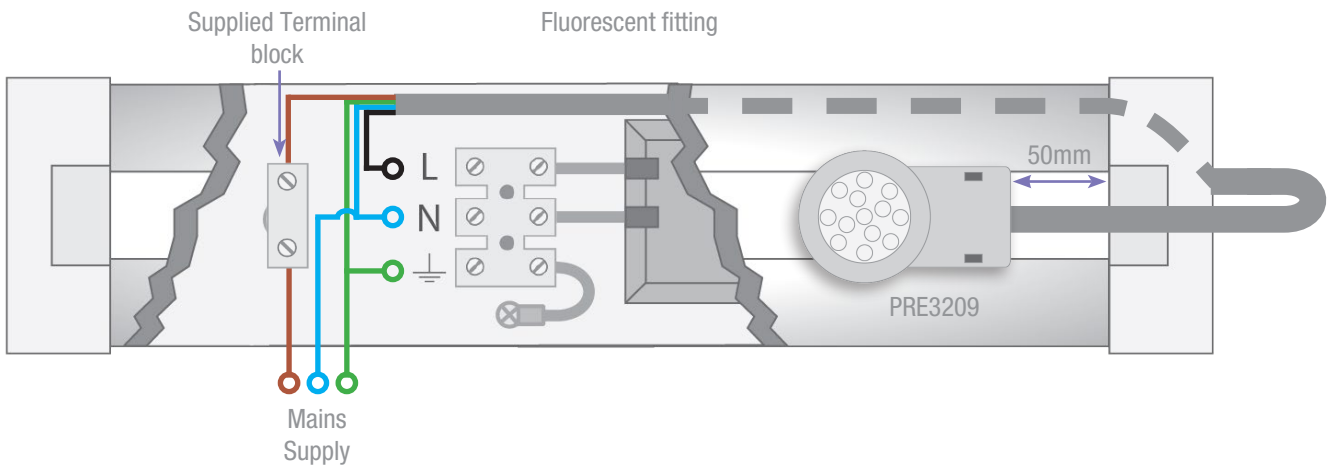

PRE3209-PRM wiring diagram:

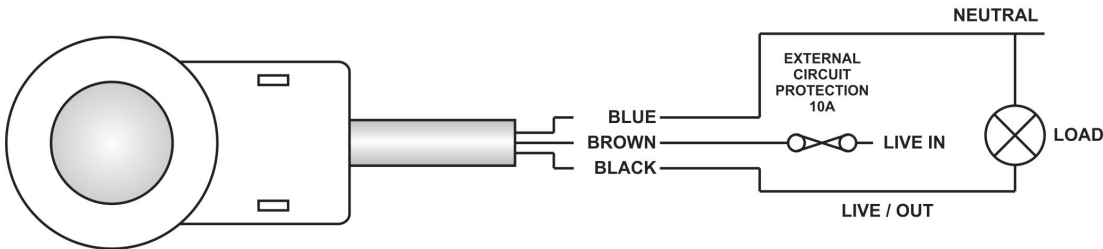

PRE3209-DD wiring diagram:

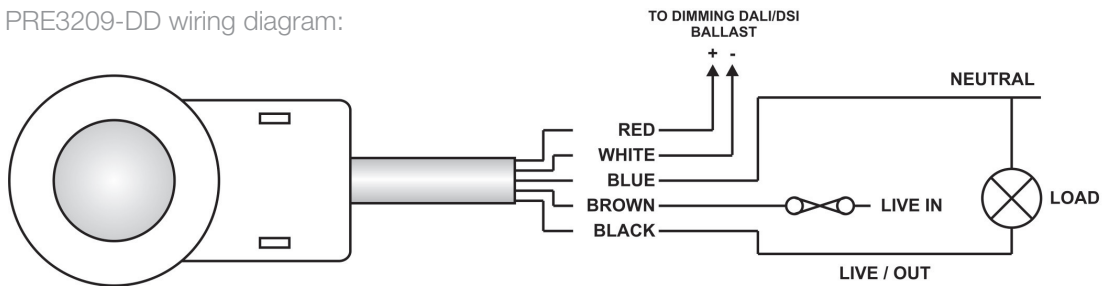

PRE3209-AD wiring diagram:

